


Synergy Funnel Trap II Canopy Assembly Instruction

Parts for Canopy Assembly:

- A) Canopy (1)
- B) Funnel (1)
- C) Canopy Connector Pins (3)
- D) Eye Bolt Hardware (eyebolt, nut, small washer, large washer, and nylock nut).

Recommended Tools for Assembly (not included):
7/16" wrench and flathead screwdriver

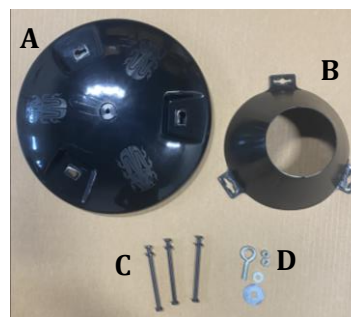

1. Eye bolt hardware assembly:
 - a) Screw the nut onto the top of the eye-bolt.
 - b) Holding the small washer against the hole in the top center of the canopy, insert the eye-bolt.
 - c) Turn the canopy over and position the large washer on eye-bolt and fasten with the nylock nut securely with wrench (*do not over tighten*).



2. Insert the double flanged side of pins up into the large hole on the funnel lips (from the bottom up). Insert tip of screwdriver in the hole beside the pin and twist it, pushing the pins clockwise until they snap into place (on the left hand side of the holes).



3. Place the funnel against the canopy, putting the top of the pins into the large holes on the canopy. Push the pins counter-clockwise until they snap into place (with pins ending up in the smaller hole slot on the right).



4. Attach the bottom of the funnel pins to the rest of the pre-assembled funnels.
5. Insert and twist collection cup to bottom funnel.
Your trap is now ready to be hung up and used!

Synergy Semiochemicals Corp.

1-604-454-1122

| www.semiochemical.com

| synergy@semiochemical.com

