Synergy Funnel Trap II Canopy Assembly Instruction

Components & Hardware:

A. 1 x Canopy (1)
B. 1 x Funnel (1)
C. 3 x Canopy Connector Pins (3)
D. 1 x Eye Bolt Hardware (eyebolt, wing nut/flange nut assembly).
E. 1 x Pre-assembled Funnels (not pictured)
F. 1 x Collection Cup (not pictured)

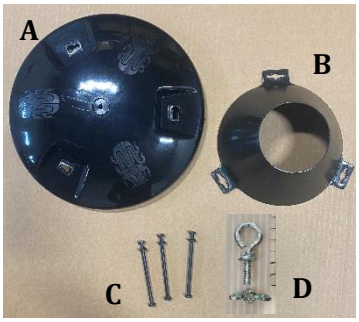

Tools Recommended: 7/16" Wrench
Flathead Screwdriver

Step 1 –Eye Bolt Hardware Assembly:

1. Insert the Eye Bolt Assembly (D) through the top of the canopy (A).
2. Holding the rounded part of the eye bolt assembly (D), turn the wing nut until snug against the bottom of the canopy (A).

Step 2 – Funnel & Connector Pin Assembly

1. Insert the double flanged side of pins (C) up into the large hole on the funnel tabs (B) (from the bottom up).
2. Insert tip of screwdriving in the hole beside the pin and twist it, pushing the pins clockwise until they snap into place (on the left-hand side of the holes).

Step 3 – Canopy Assembly

1. Place the funnel (B) against the canopy (A), putting the top of the pins into the large holes on the canopy (A).
2. Push the pins counter-clockwise until they snap into place (with pins ending up in the smaller hole slot on the right)

Step 4 – Collection Cup and Pre-assembled Funnels

1. Attach the bottom of the funnel pins to the rest of the pre-assembled funnels (E).
2. Insert and twist collection cup (F) to bottom funnel to lock it in place

.

Synergy Semiochemicals Corp.
p: 604-454-1122 **w:** www.semiochemical.com
7572 Progress Way Delta, BC V4G 1E9